

ultraHD™

USER GUIDE



flip
video™

Consult Safety Instructions Before Use.

Install Battery Pack

Welcome to Flip UltraHD™

- 1 Slide battery latch to unlock.
- 2 Slide front panel down.
- 3 Position rechargeable Lithium-ion battery pack with + and - at the right side and Flip Video™ logo facing up.

Note: The battery pack is shipped partially charged. For best results, fully charge (up to 4 hours) before use. Simply follow steps in the Recharge Battery Pack section.

Using Standard AAA Batteries

If you need a backup power source for your UltraHD, three standard AAA batteries will provide power for a limited period of time.



Get Started

- 1 Press power button to turn on. Video camera setup appears automatically the first time you power on.

Set Language

- Use + and - to select your language.

Set Date

- Use + and - to adjust current setting.
- Use < and > to select month/day/year.

Set Time

- Use + and - to adjust current setting.
- Use < and > to select hour/minute/AM/PM.

Turn Off Tones

- Use < and > to turn the tones on and off.

Turn Off Recording Light

- Use < and > to turn the recording light on and off.

To Return to Video Camera Setup Later

Starting with the video camera OFF:

- 1 Press power button to turn on.
- 2 When UltraHD logo appears, press and hold record button until SET LANGUAGE appears.



Record and Play

Record Videos

- 1 Press [red dot] to start/stop recording.
- 2 Press and hold + and - to zoom in/out during recording.

Play Videos

- 1 Press [right arrow] to play/pause.
- 2 Press and hold + and - to increase/decrease volume.
- 3 Press < and > to view previous/next video.

Note: Press and hold < and > during playback to rewind/fast-forward.

Delete Videos

- 1 Press [trash can] button. Select YES to confirm.

Note: Delete button is locked the first time you power on. To unlock, press and hold delete button.



Connect to Computer

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Plug USB arm into USB port on computer.
- 3 The battery pack will begin recharging and you can install pre-loaded FlipShare™ software on your computer.

Recharge Battery Pack

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Plug USB arm into USB port on computer.
- 3 Screen will display charging status.
 - [charging icon] displays to indicate charging in process.
 - [full battery icon] displays to indicate a fully-charged battery.
 - Fully recharging the battery pack takes up to 4 hours.
 - Disconnect your video camera from the computer after charging to help preserve the battery pack's lifespan and performance.
 - The optional Flip Video Power Adapter (available at www.theflip.com/accessories) can charge the battery pack in about 2 hours.

Note: Your computer must be powered on for your video camera to charge.



Organize, Create and Share

flipshare™

Pre-loaded FlipShare software makes editing and sharing your videos easy. Just plug in your video camera, open FLIPVIDEO and launch Setup FlipShare (PC) or Start FlipShare (Mac).

FlipShare Features

- Save videos to your computer.
- Organize your videos.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos privately via email, Flip Channels™ or upload directly to:



Visit the FlipShare software HELP section for detailed instructions on all features.

600-0151-101 / 3240-00681

View On HD Television

- 1 Power off video camera and television.
- 2 Connect video camera to television with optional HDMI™ Cable (available at www.theflip.com/accessories).
- 3 Power on video camera and television.
 - Video camera screen will be off when connected to television.
- 4 Switch your television to the appropriate VIDEO input.
 - See television manual for instructions.
- 5 Press play button to start/pause playback.



HDMI

Note: You can use any brand of HDMI Cable that has an HDMI Connector (for the HDTV) on one end and HDMI Micro Connector (for the video camera) on the other end.

Video Camera Features



1	Power Button	Press to turn on/off.
2	Wrist Strap Hook	Attach wrist strap (included in box).
3	Tripod Mount	Attach a tripod or other Flip Video accessory.
4	HDMI™ Micro Port	Connect HDMI™ cable accessory to your HDTV.
5	FlipPort	Connect accessories to your Flip™ video camera.
6	Battery Latch	Slide to lock/unlock.
7	Recording Light	Red light turns on during recording. Built-in wide-range microphone is also located here.
8	USB Latch / Arm	Slide down to release USB arm. Connect to a PC or Mac USB port.
9	Screen	Recording viewfinder/playback screen.
10	Recording Controls	Press buttons to record and preview videos.
	Record Button	[red dot] Press to start/stop recording. <i>During power on:</i> Hold to return to video camera setup.
	Play Button	[right arrow] Press to play/pause playback. Press and hold to play all videos.
	Delete Button	[trash can] Press to delete. Press and hold to lock/unlock the delete button.
	Up/Down Buttons	[+/-] <i>While recording:</i> press and hold to zoom in/out. <i>During playback:</i> press and hold to increase/decrease volume.
	Left/Right Buttons	[<>] <i>While paused:</i> press to skip to previous/next video. <i>During playback:</i> press and hold to rewind/fast-forward.

Extend the fun with Flip Video Accessories. Learn more at www.theflip.com/accessories.

Included In This Box:

Flip UltraHD™ Video Camera, Rechargeable Battery Pack, Wrist Strap, Soft Case, User Guide, Safety Instructions and Warranty Information

Flip Video Support:

Go to www.theflip.com/support

Declaration of Conformity:

Responsible Party:
Cisco Consumer Products LLC, 185 Berry Street,
Suite 6500, San Francisco, CA 94107 USA

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and TV Interference

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION: Changes or modifications to this device not authorized by Cisco Consumer Products LLC may void the user's authority to operate this device.

CANADIAN ICES-003 STATEMENT:

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

© 2010 Cisco Systems, LLC and/or its affiliated entities. CISCO, FLIP ULTRAHD, FLIP VIDEO and the FLIP VIDEO LOGO are trademarks or registered trademarks of Cisco. and/or its affiliated entities. All other trademarks in this document or website are the property of their respective owners. Designed in the USA. Made in China. For more information, visit www.theflip.com.

Facebook, Twitter, and YouTube are trademarks of their respective owners. Mac is a registered trademark of Apple Inc.

The HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

CISCO™